

# Yealink VCR20 Datasheet

## Introduction

 
You can use the VCR20 Remote Control to control the Yealink endpoint. VCR20 uses two AAA batteries (1.5V).

## VCR20 Compatibility

For the VCR20 compatibility, refer to [Rooms Accessories Compatibility Lists](#).

## Yealink VCR20


For MeetingBar A20/A30

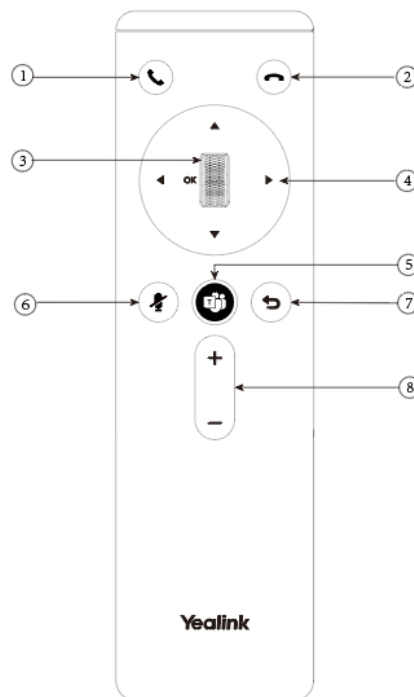

No.	Item	Description
1	Answer Key	Make or receive calls
2	End Key	End a call or exit the current meeting.
3	Scroll Wheel (OK Key)	<ul style="list-style-type: none"> <li>- Long press the <b>Teams Key</b> to bring up the sidebar, enter <b>Camera Control</b>, and swipe up to zoom in the camera image</li> <li>- Long press the <b>Teams Key</b> to bring up the sidebar, enter <b>Camera Control</b>, and swipe down to zoom out the camera image</li> <li>- Press OK to confirm.</li> </ul>

4	Navigation Key	Long press the <b>Teams Key</b> to bring up the sidebar, enter <b>Camera Control</b> , and pan and tilt the camera to adjust the viewing angle.
5	Teams Key	- On the home screen, press the Teams key to join the first meeting on the meeting list. - On the home screen or in a meeting, press and hold the Teams key for 5 seconds to open the sidebar.
6	Mute Ke	Mute or unmute the microphone.
7	Return Key	Return to the previous level.
8	Volume Key	Turn up/down the volume.

**For MVC/ZVC/MeetingBar A20/A30**

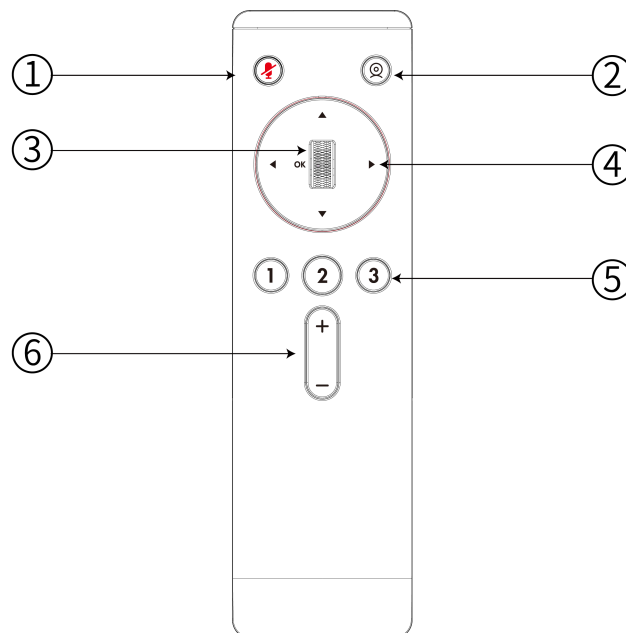 

No.	Port Name	Description
1	Mute Key	Mute or unmute the microphone.
2	Tracking Feature Key	Press and hold the <b>Tracking Feature</b> key to select a desired tracking mode. For which Yealink UVC Cameras/Yealink Intelligent Cameras support tracking features, refer to <a href="#">Rooms Supported Features List</a> for details.
3	OK Key	<ul style="list-style-type: none"> <li>• Swipe up to zoom in on the camera image.</li> <li>• Swipe down to zoom out the camera image.</li> <li>• Press OK to confirm.</li> </ul>
4	Navig	Pan and tilt the camera to adjust the viewing angle.

	ation Key	
5	1/ 2/ 3 key	<ul style="list-style-type: none"><li>• Press and hold the number key to add/update the preset position.</li><li>• Press the number key to apply for the preset position.</li></ul>
6	Volum e Key	Turn up/down the volume.